


# Climate Control Leaks in 6 Easy Steps

1. Connect to the battery.
2. Insert smoke supply hose into vacuum line after check valve.
3. Push "START" button.
4. Change position on selector.
5. Check flow meter (No Flow – No Leak)
6. Look for smoke or UltraTraceUV<sup>®</sup> dye.

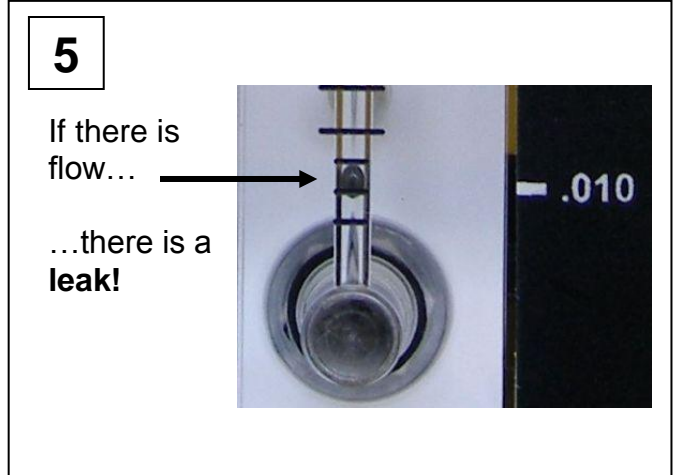

**Seeing is Believing!**